

# INSTALLATION GUIDE FOR RECOM GROW LIGHT

## ACCESSORIES


1.Recom mounting handle 315/400/600/630

2.Recom mounting handle 800/1000

**A** Eye Bolt


**B** U-Bolt

3.Vee Hanger

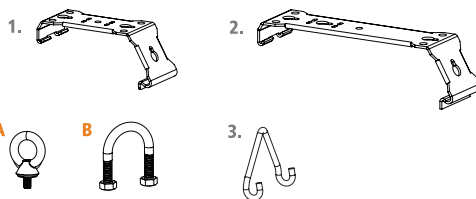


## VERTICAL INSTALLATION

→ Hanging 315, 400, 600 and 630W Grow Lights

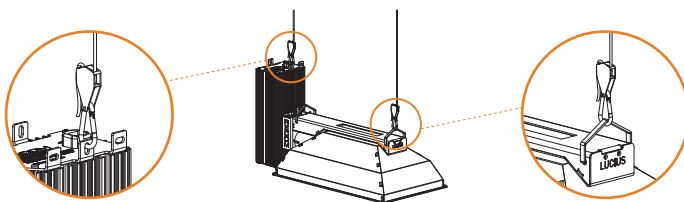


→ Hanging 800 and 1000W Grow Lights

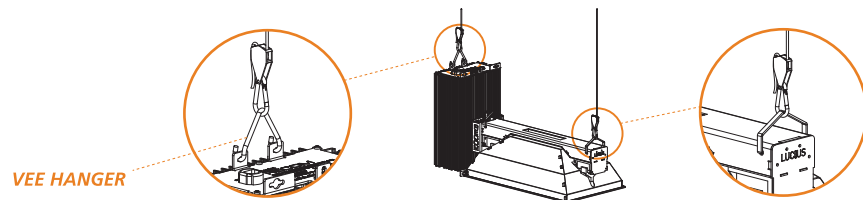

## HORIZONTAL INSTALLATION

→ Hanging DUAL CMH 315W Grow Light

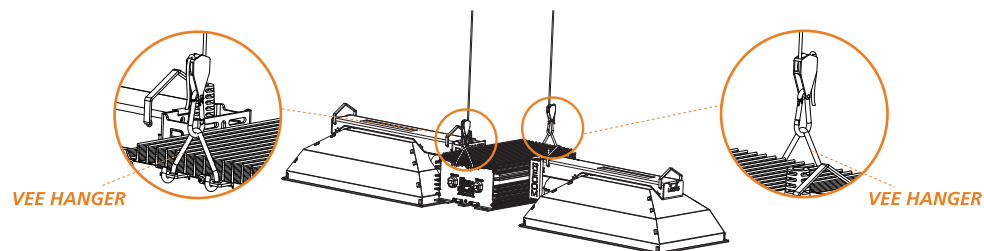


## INSTALLING 315, 400, 600, 630, 800 AND 1000W USING RECOM MOUNTING HANDLE

### RECOM MOUNTING HANDLE ASSEMBLY

#### → To secure Grow Light to Recom Mounting Handle


- 1 In order to secure the Grow Light to the Recom Mounting Handle, position the rear of the handle into the T-slot of the ballast.
- 2 Bring the Grow Light towards the other end of the handle until the handle hooks are safely secured in the Recom box slots.

**Note:** Make sure the locking hooks of the Recom handle are secured into the slots on the top of Recom bracket to avoid accidents or failure.

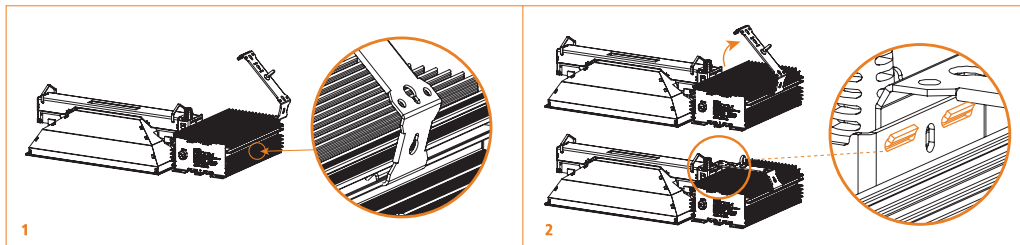

#### → To remove the Recom Mounting Handle

- 1 Lift the unlocking latch inside the bracket box.
- 2 Hold the unlocking latch open while sliding both the reflector bracket and the Recom handle out of the ballast.

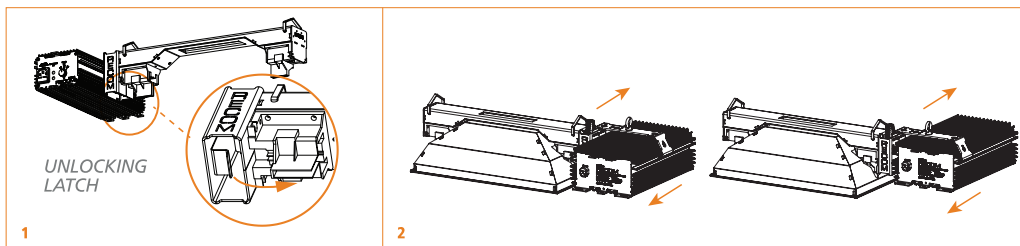


### HANGING RECOM GROW LIGHTS

*Lucius Recom Mounting Handle allows Grow Lights to be installed in 6 different positions*


#### → 1. Using eye bolt

- 1 Screw eye bolt to Recom handle and fasten using M6 nut.
- 2 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*
- 3 Secure the rope ratchet clip to the eye bolt of the Recom hanger and the front hanger of the fixture bracket.

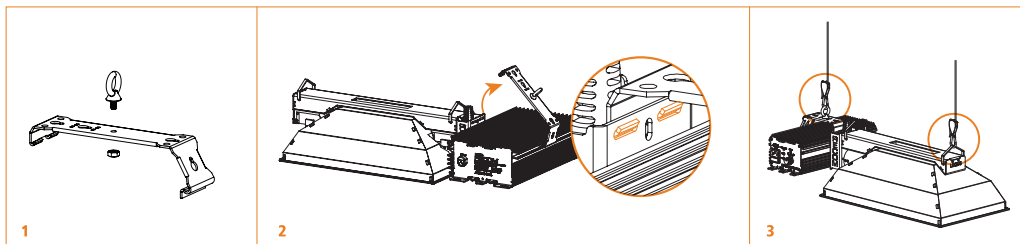


## → 2. Ceiling Mount

- 1 Screw Recom Mounting Handle to ceiling.
- 2 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*

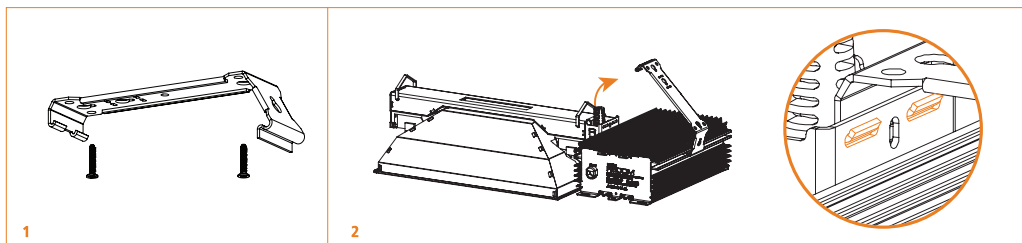

## → 3. Wall Mount at 45° Angle


- 1 Screw Recom Mounting Handle to wall using the specified rear key hole.
- 2 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*

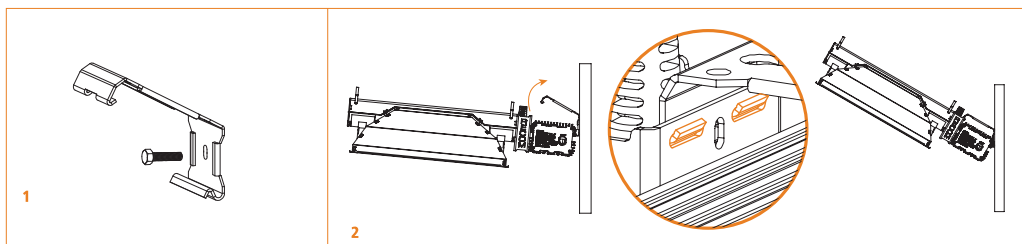

**Note:** The wall mounting is recommended for complementary side lighting.


## → 4. Uni-Strut Mount

- 1 Insert the spring M10 - 3/8" nuts (not included) into the uni-strut and line them up to match the holes of the Recom Mounting Handle.
- 2 Use M10 - 3/8" bolts to secure the Recom Mounting Handle to the uni-strut by screwing into the spring nuts.
- 3 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*

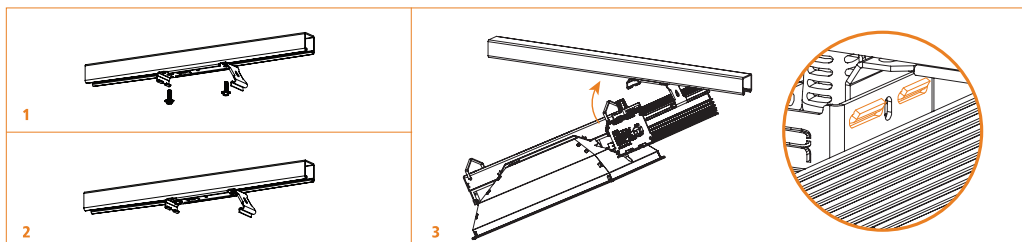

## → 5. Tent Mount

- 1 Secure Recom handle to a pole using the Lucius U-bolts.
- 2 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*

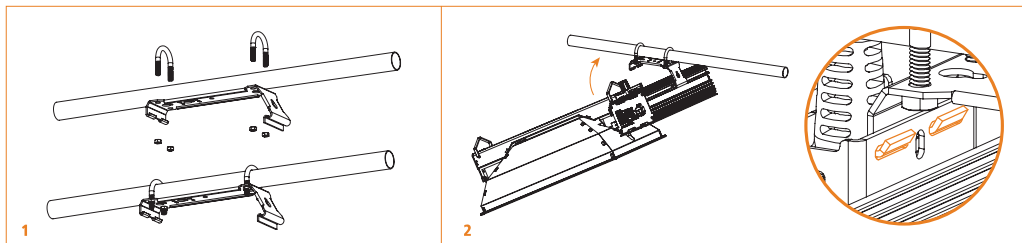

## → 6. All Thread Mount

- 1 Secure Recom handle to all thread using an M10-3/8" nut and washer on the top side and underside.
  - If using a 315, 400, 600 or 630W grow light the all thread must go through the front key hole of the Recom handle (Refer to image A).
  - If using a 800W or 1000W grow light the all thread must go through the middle key hole of the Recom handle (Refer to image B).
- 2 Secure Grow Light to the Recom Mounting Handle. *Follow "Recom Mounting Handle Assembly"*

